


# Brake Shoes

## Disassembly

1. Remove the tension pins by pushing the retainer spring and turning them.

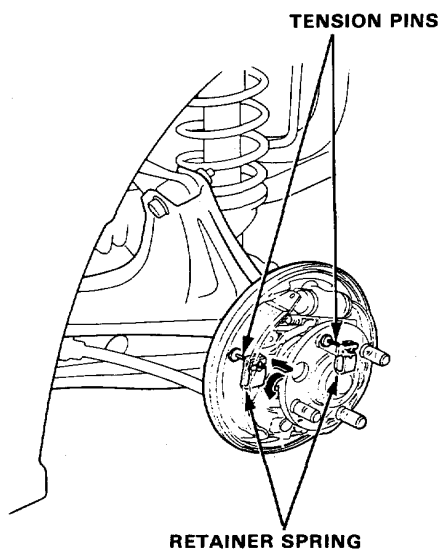


2. Lower the brake shoe assembly and remove the lower return spring.

**NOTE:** Make sure not to damage the dust cover on the wheel cylinder.

3. Remove the brake shoe assembly.

4. Disconnect the parking brake cable from the parking brake lever.
5. Remove the spring A and upper return spring, adjuster strut assembly, and separate the brake shoes.

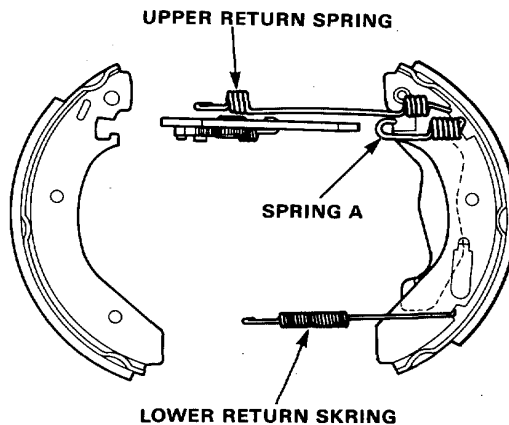

**NOTE:** Inspect all parts for worn, rust, and damage.